



LTMon Commands

Command	Description
H	displays the Help quick reference list
DUN	Display luminex tape UNits
DAC	Display ACTive tape units
DNED dev	Display device NED from memory
FNED dev	Fetch device NED from device
DDEV dev	Display channel gateway DEVice status
DCAP	Display storage CAPacity
DSP <dev>	Display Scratch Pools
DAL	Display ALert messages from channel gateway and ddr
DALCG	Display ALert messages from channel gateway
DALDDR	Display ALert messages from DDR
DCG	Display Channel Gateway servers
DDS	Display Data Servers
DREP dataserver	Display REplication status
DV volser	Display Volser info
HDUN	Help for DUN symbols
HDAC	Help for DAC symbols
HALTALL	terminate all monitor subtasks
PSTOP	terminate processing and quit
DISC	DISCover servers and tape units
LSE	List defined SErvers
LDE	List defined DEvices (and servers)
LMO	List MONitor subtask status

Channel Gateway Alert Codes

Alert Code	Description
LUM001	Power fault
LUM002	Fan fault
LUM003	General hardware fault
LUM004	Storage capacity warning
LUM005	Internal hard disk mirror fault
LUM006	Internal hard disk fault
LUM007	Device program fault
LUM008	Reserved
LUM009	Idle device warning
LUM010	Device program not responding
LUM011	Scratch mount request fault
LUM012	Specific mount request fault
LUM101	Scratch pool minimum threshold reached
LUM102	Scratch pool does not exist
LUM103	Data server alert

LTMon Command to Admin+ Script Cross Reference

LTMon Command	Admin+ Script
DALCG	GETALERT
DALDDR	GETDDRALERT: dataserver
DCAP	GETCAP
DCG	GETCGINFO
DDEV dev	GETDEVSTAT: tag
DDS	GETSTORAGELIST
DREP dataserver	GETDDRREPSTATUS: dataserver
DSP	GETALLSRCNT
DSP dev	GETDEVSCRCNT: tag
DV volser	GETVOLINFO: volser

© 2013 Luminex Software, Inc. All rights reserved. No part of this work may be reproduced or disclosed to third parties in any form or by any means, graphically, mechanically or electronically, including but not limited to photocopying, recording or taping without the prior written permission of Luminex Software, Inc.

Luminex, Channel Gateway and LTMon are trademarks of Luminex Software, Inc. All other trademarks and trade names are the property of others. Please see full documentation for complete terms of use and legal notices.

DISCLAIMER: While every effort has been made to ensure the technical accuracy of this manual, Luminex makes no warranties or representations, either express or implied, with respect to the contents herein. Further, should the procedures set forth in this manual not be followed or be misapplied, Luminex disclaims any warranty for damage to the product or any other liability.